






Enjoy your Dancing Dish & Décor purchase!

-  Some supplies are sourced from previously loved items & will show signs of some use adding to their charm.
-  Consider your repurposed item fragile and only hand wash. (Never put china in the dishwasher)

To put your plate stand together follow these steps:

1. Place metal washer and felt washer over the screw
2. Place washer screw combo through the underside of the largest plate, so the very bottom of your plate stand
3. Place another felt washer over the threads in the screw on the topside of the plate.
4. Place the lower rod onto the screw from the top side of the plate and screw them together (lower rod has a hole in one end and threading on the other end).
5. Place a felt washer on the threaded side of the lower rod, place the next smaller plate on top with the threading showing through the center hole.
6. Place another felt washer on the thread, this time on the top side of the plate.
7. Screw the next rod to the first one

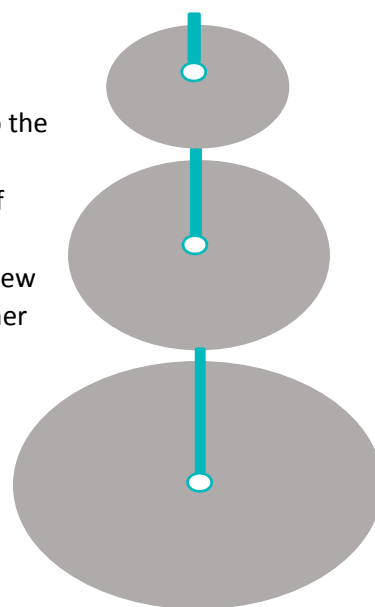

You have completed two tiers, if your stand has three tiers, repeat steps 5-7 for the next tier.

ENJOY!

...keep dancing the dream!

Email: DancingDishAndDecor@gmail.com

Etsy: <https://www.etsy.com/shop/DancingDishAndDecor>

Twitter: <https://twitter.com/DancingDishDeco>

Pinterest: <http://www.pinterest.com/DancingDish/>

Facebook: www.facebook.com/#!/DancingDishAndDecor

*Previously loved...
Dancing again with a new purpose*

